

13. CLUTCH HOUSING/ENGINE UNDER CASE/EXHAUST PIPE

HONDA
BF20

1. ENGINE UNDER CASE/EXHAUST PIPE

2. CLUTCH HOUSING

1. ENGINE UNDER CASE/EXHAUST PIPE

a. REMOVAL/INSTALLATION

- 1) Remove the engine (P. 6-1).
- 2) Remove the steering handle (P. 12-1).

