


Output setting

1. Press the **MENU/ZOOM** key twice to show the main menu.
2. Select [I/O Setup], then press the **ENT** key.
3. Select [Data 2], [Data 3] or [NMEA0183 Version] depending on the equipment connected.
4. Press the **ENT** key. One of the following screens appears depending on the item selected at step 3.

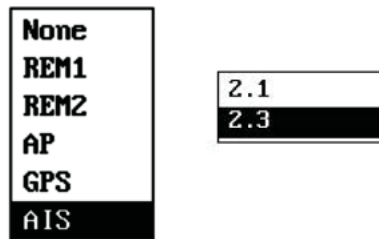

“Data2/Data3” “NMEA0183 Version”

5. Press ▲ or ▼ to select the option.
REM1, 2: Output data to radar, echo sounder.
AP: Output data to an autopilot.
GPS: Output GPS data (used for the service)
2.0, 3.0: select the NMEA version of external equipment. If you are unsure of the version number, try both and select the one which successfully outputs data.
6. Press the **ENT** key.
7. Press the **MENU/ZOOM** key twice to close the menu.