


# Wiring Diagram

for connecting a *STERLING* AL12140 or AL12140PDAR alternator

Set Sterling advanced regulator to POSITIVE field control!

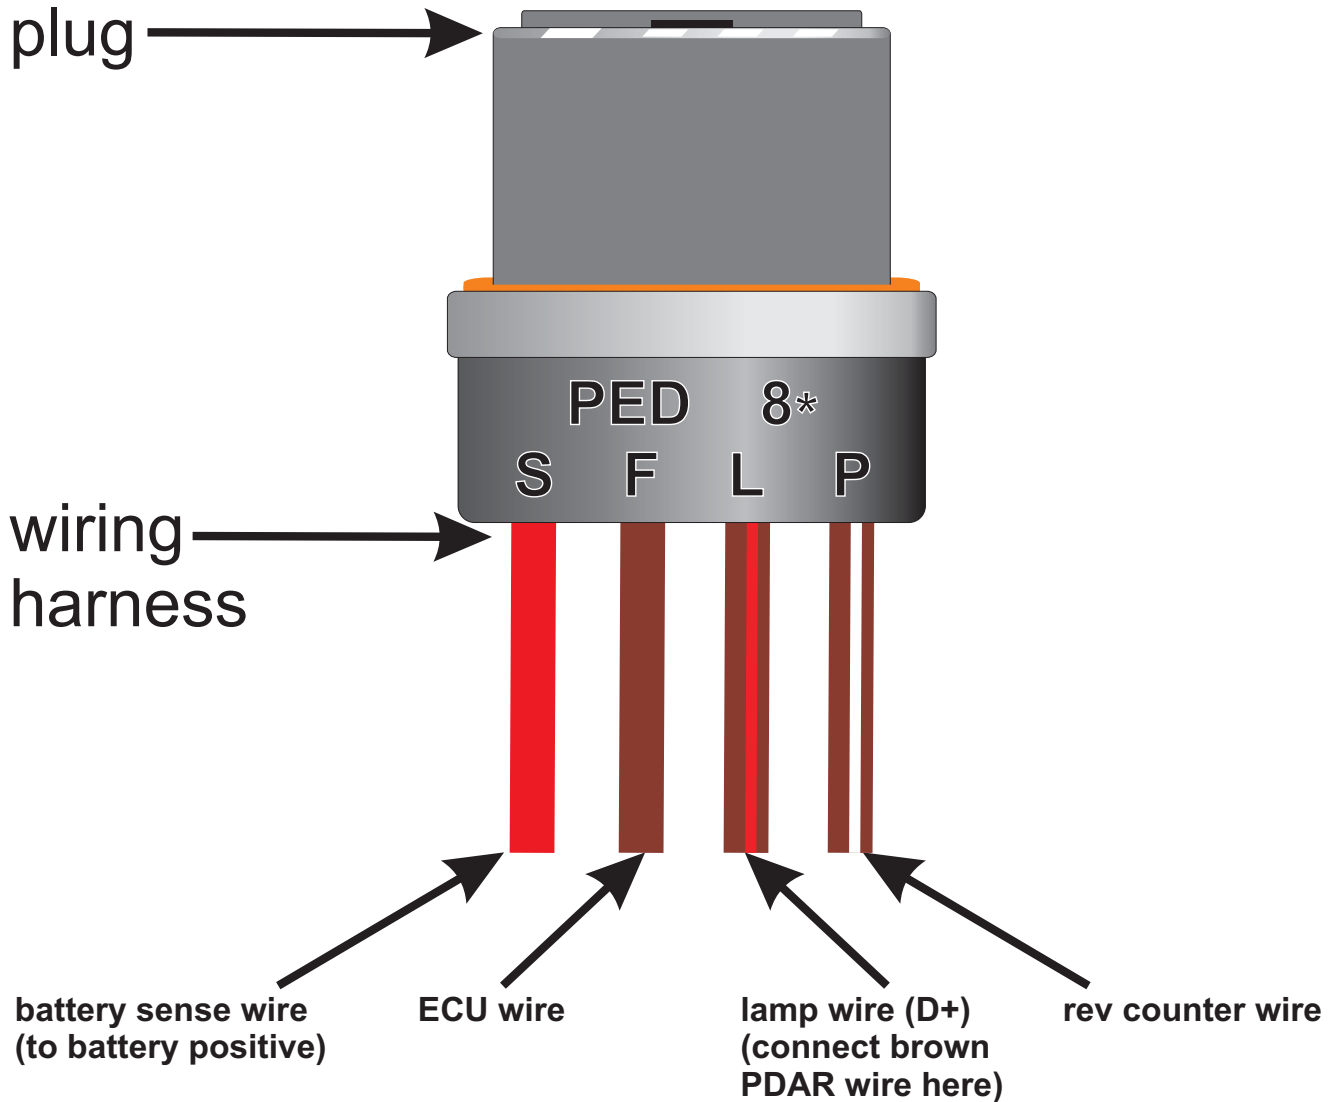

## ***STERLING POWER PRODUCTS LTD***

86A Blackpole Trading Estate West  
Worcester, WR3 8TJ  
England

Tel.: +44 (0)1905 453999

Fax: +44 (0)1905 458836



Email: [help@sterling-power.com](mailto:help@sterling-power.com)

# Wiring Diagram

for connecting a *STERLING* AL12140PDAR alternator

with Sterling advanced regulator

Set Sterling advanced regulator to POSITIVE field control!

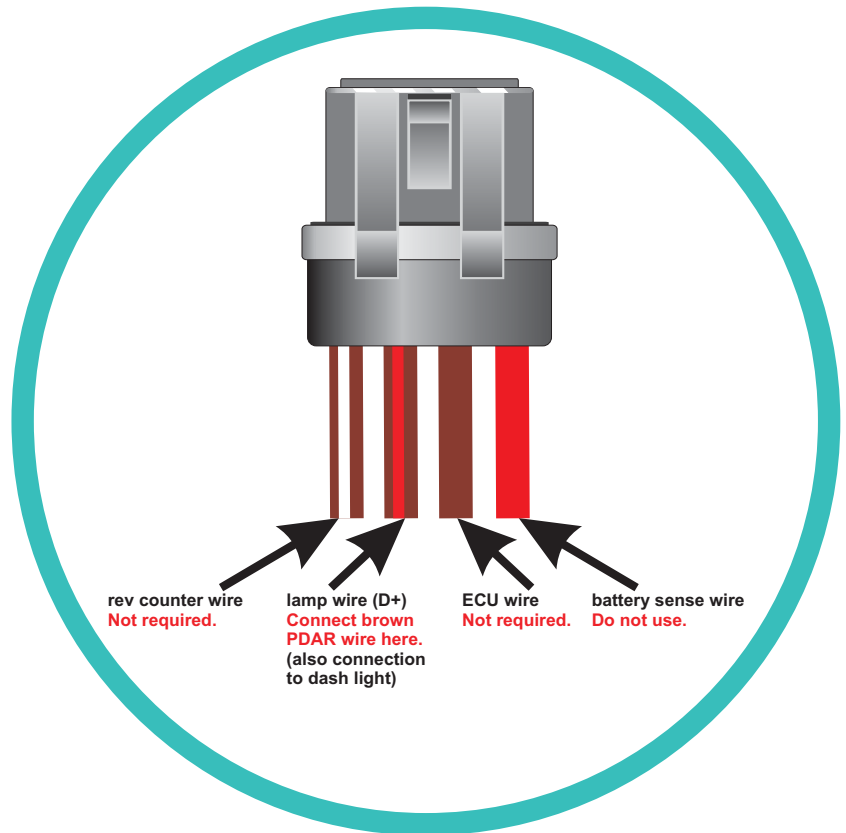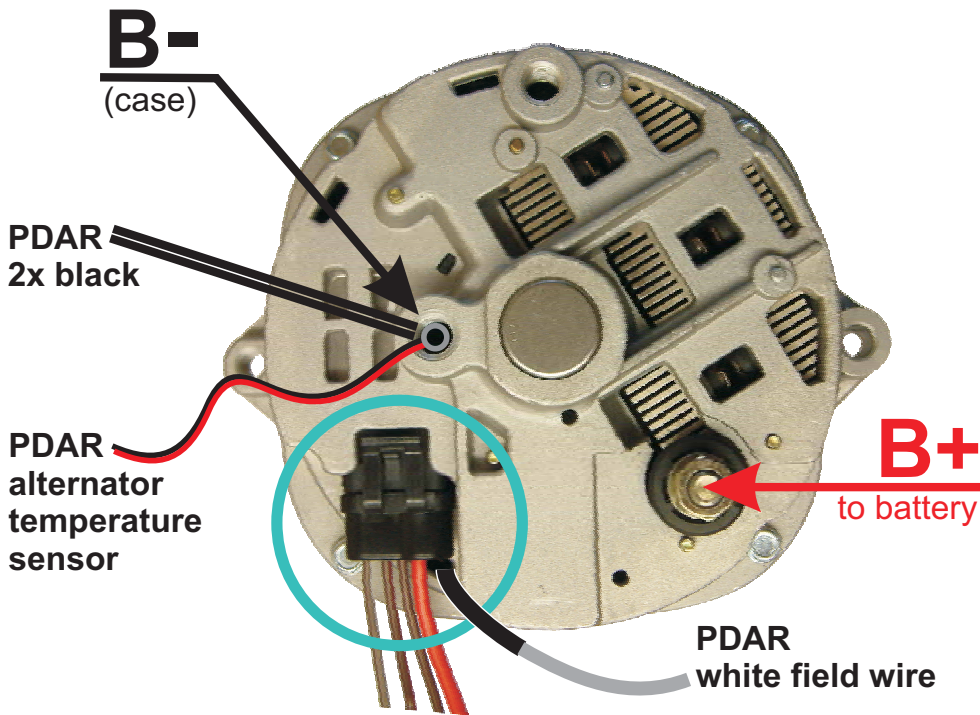

## ***STERLING POWER PRODUCTS LTD***

86A Blackpole Trading Estate West  
Worcester, WR3 8TJ  
England

Tel.: +44 (0)1905 453999



Fax: +44 (0)1905 458836

Email: [help@sterling-power.com](mailto:help@sterling-power.com)

# Anschlussplan

für die *STERLING AL12140PDAR* Lichtmaschine  
(mit Sterling PDAR Hochleistungsregler)

**Bitte stellen Sie den Sterling Hochleistungsregler auf POSITIVE Felderregung!**

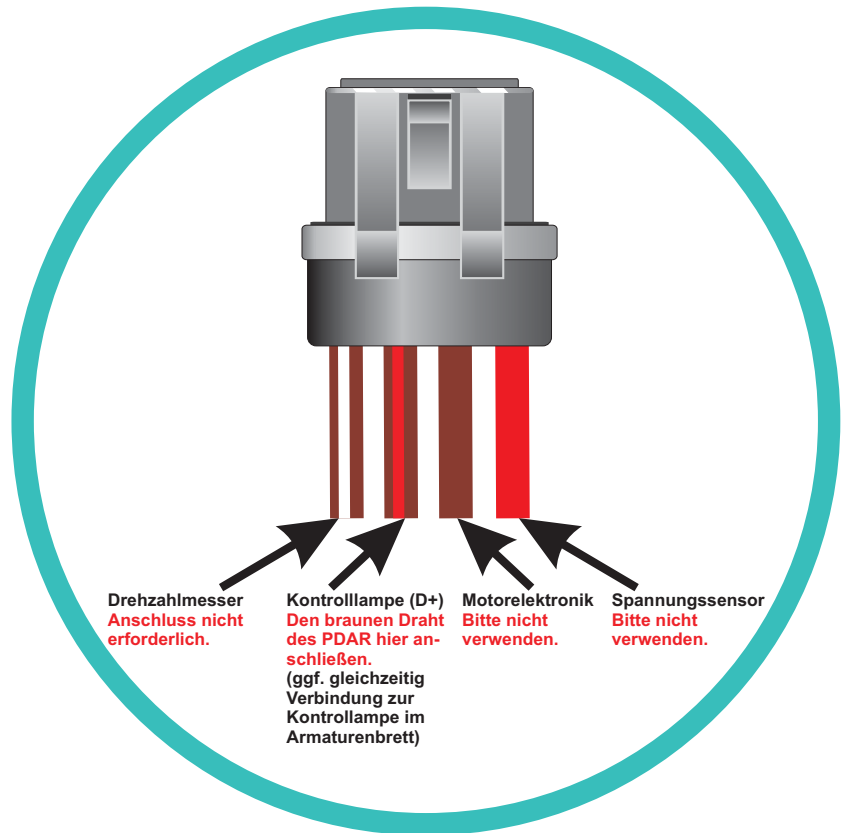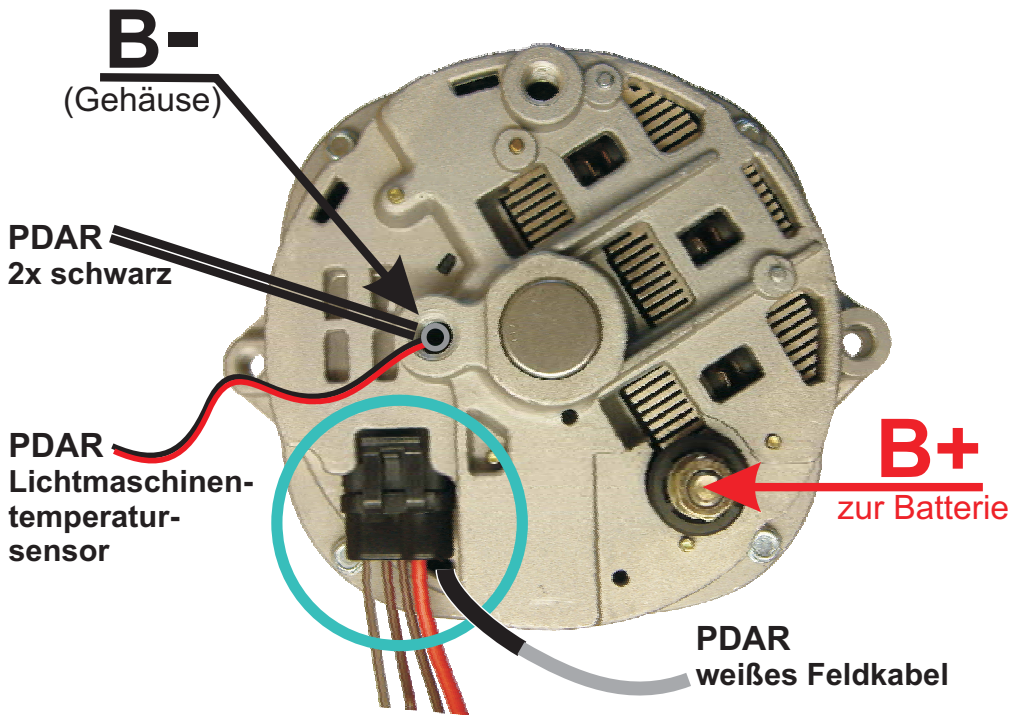

## ***STERLING POWER PRODUCTS LTD***

86A Blackpole Trading Estate West  
Worcester, WR3 8TJ  
England

Tel.: +44 (0)1905 452105


Fax: +44 (0)1905 458836

Email: [help@german.sterling-power.com](mailto:help@german.sterling-power.com)

# Wiring Diagram

for connecting a *STERLING* AL12140 alternator

**standard regulator only**

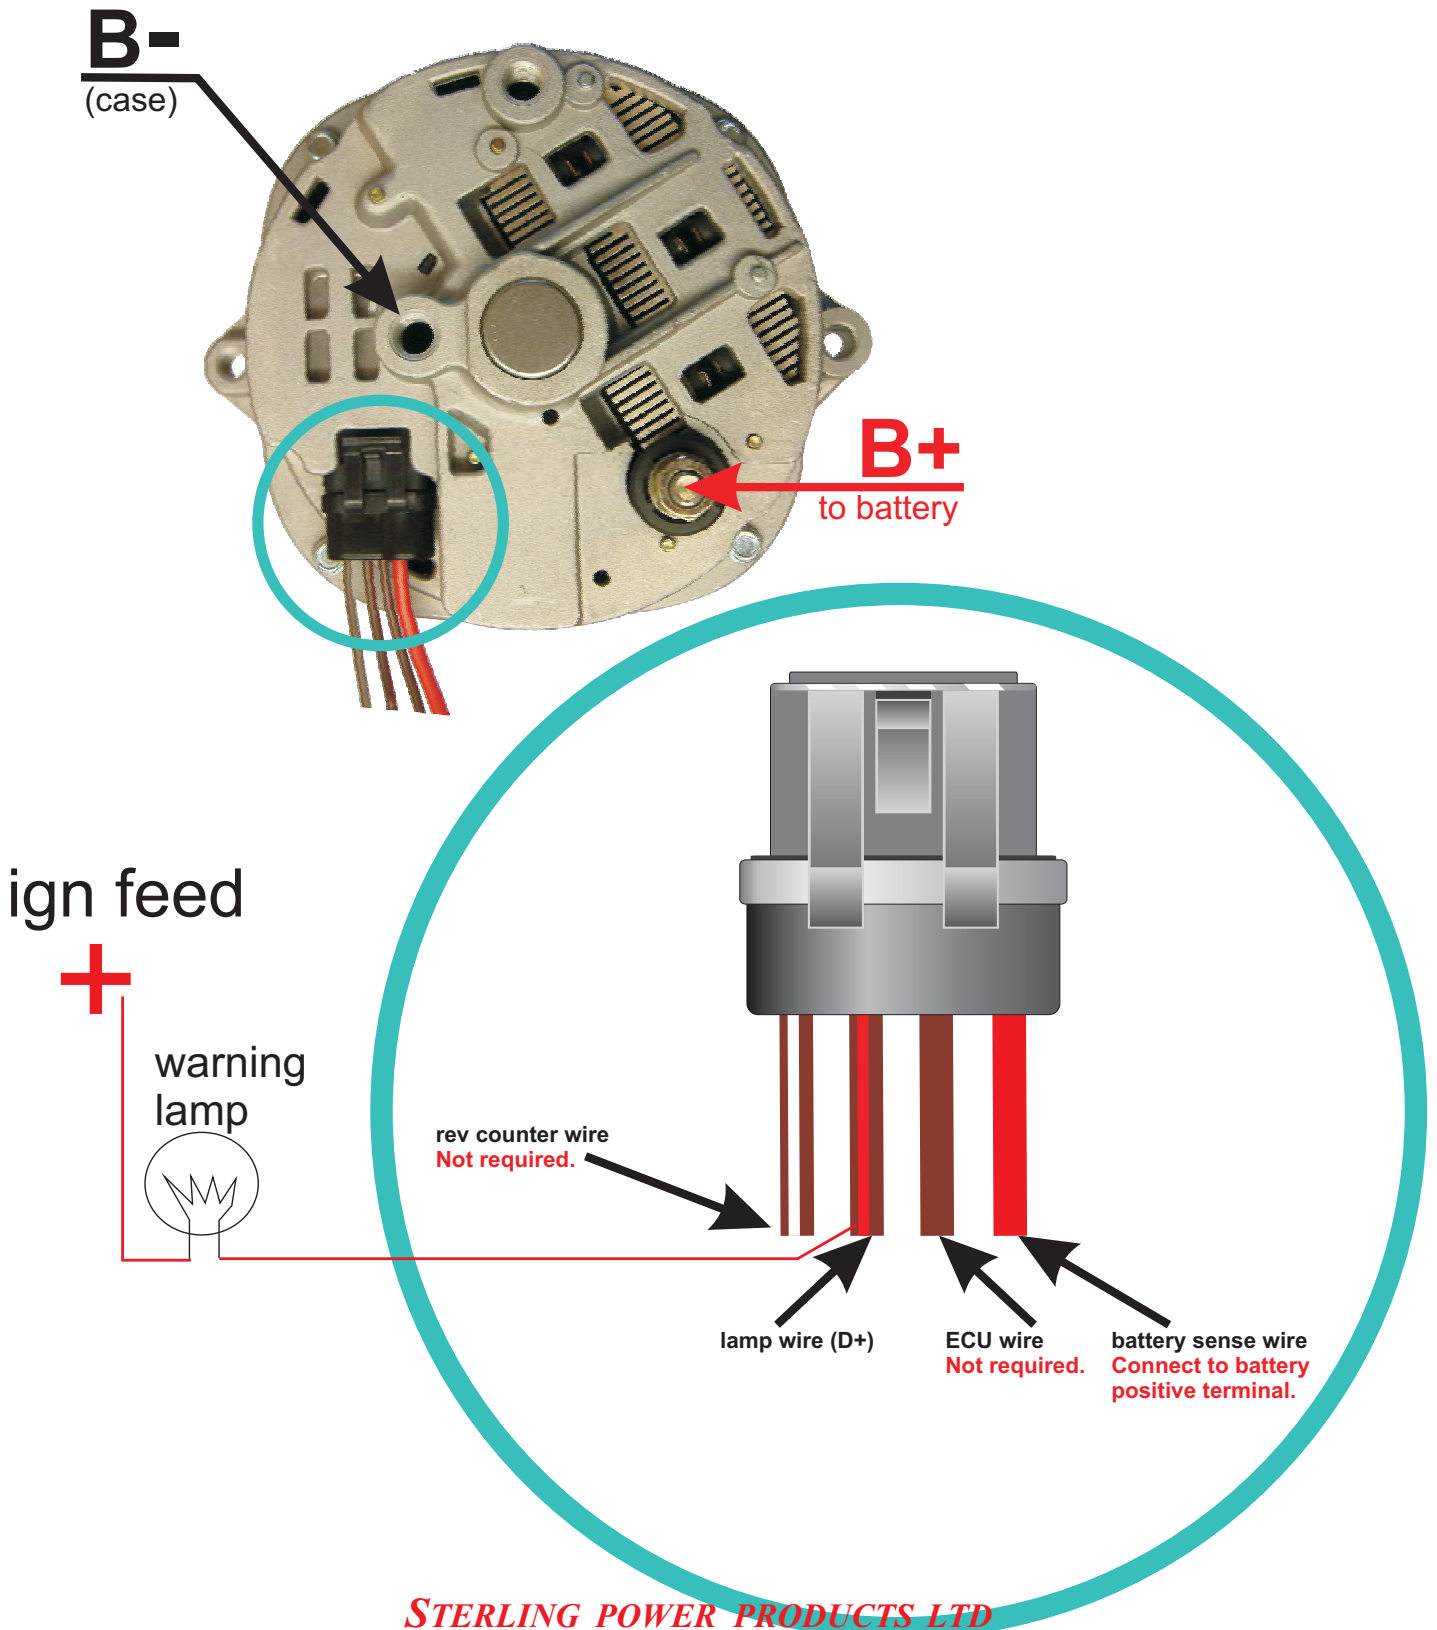

## ***STERLING POWER PRODUCTS LTD***

86A Blackpole Trading Estate West  
Worcester, WR3 8TJ  
England




Tel.: +44 (0)1905 453999

Fax: +44 (0)1905 458836

Email: [help@sterling-power.com](mailto:help@sterling-power.com)

# Wiring Diagram

for connecting a *STERLING* AL12140 alternator  
(standard regulator with Sterling alternator-to-battery charger)

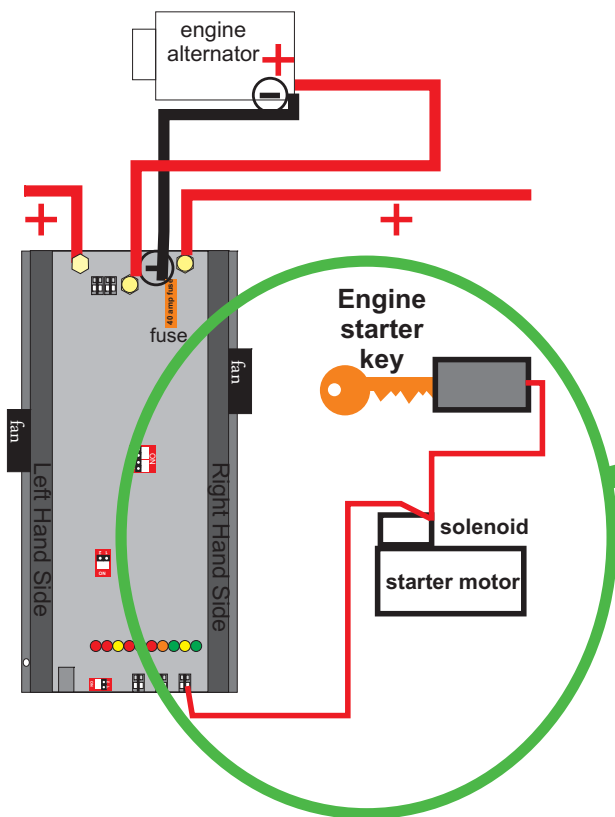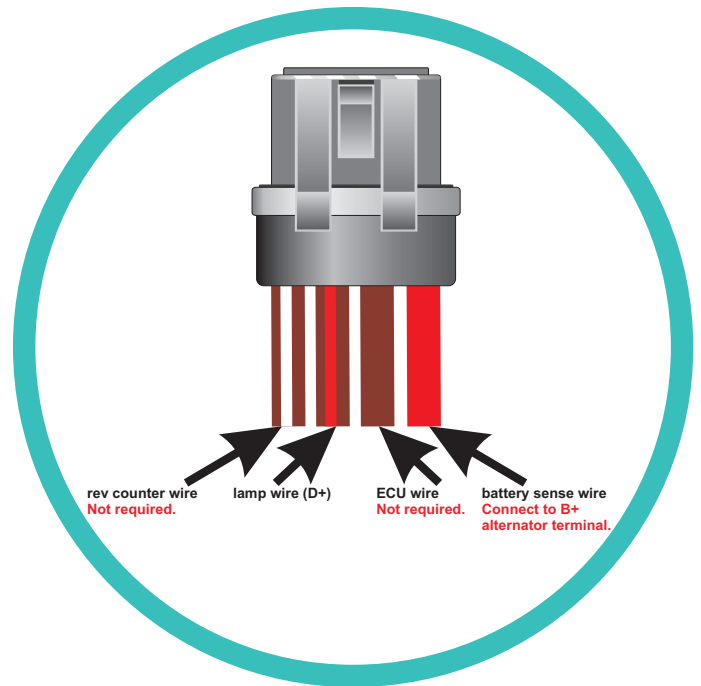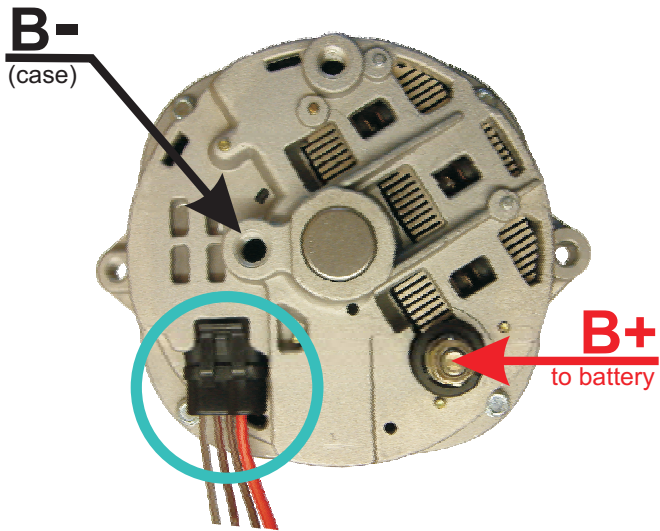

**Solenoid feed  
must be used!**

## ***STERLING POWER PRODUCTS LTD***

86A Blackpole Trading Estate West  
Worcester, WR3 8TJ  
England



Tel.: +44 (0)1905 453999

Fax: +44 (0)1905 458836

Email: [help@sterling-power.com](mailto:help@sterling-power.com)

# Anschlussplan

für die *STERLING* AL12140 Lichtmaschine  
(mit Standardregler)

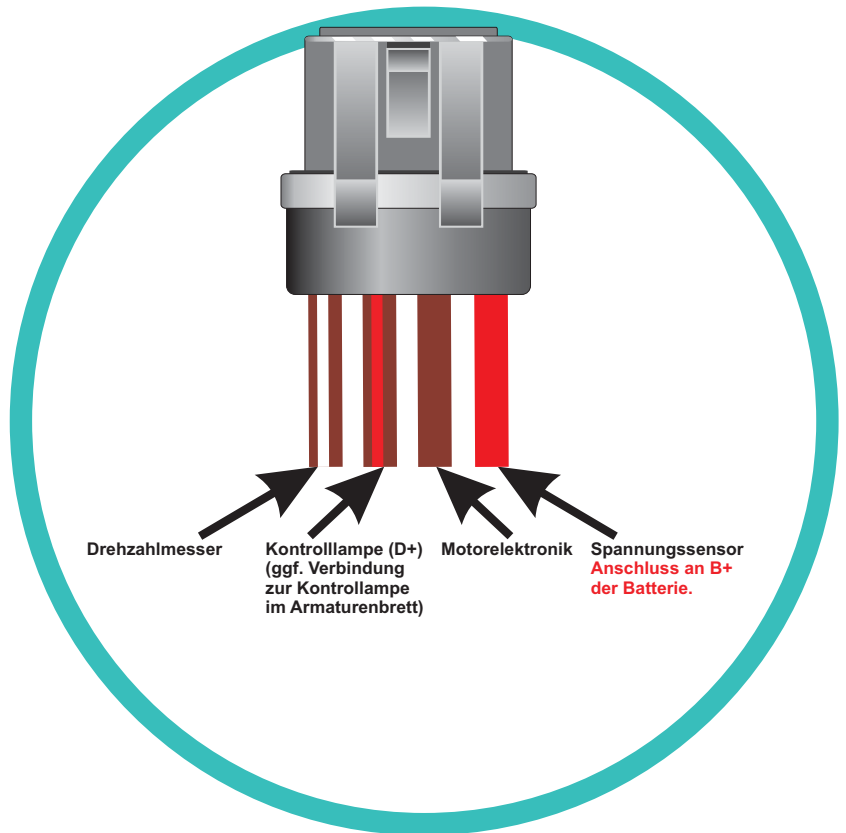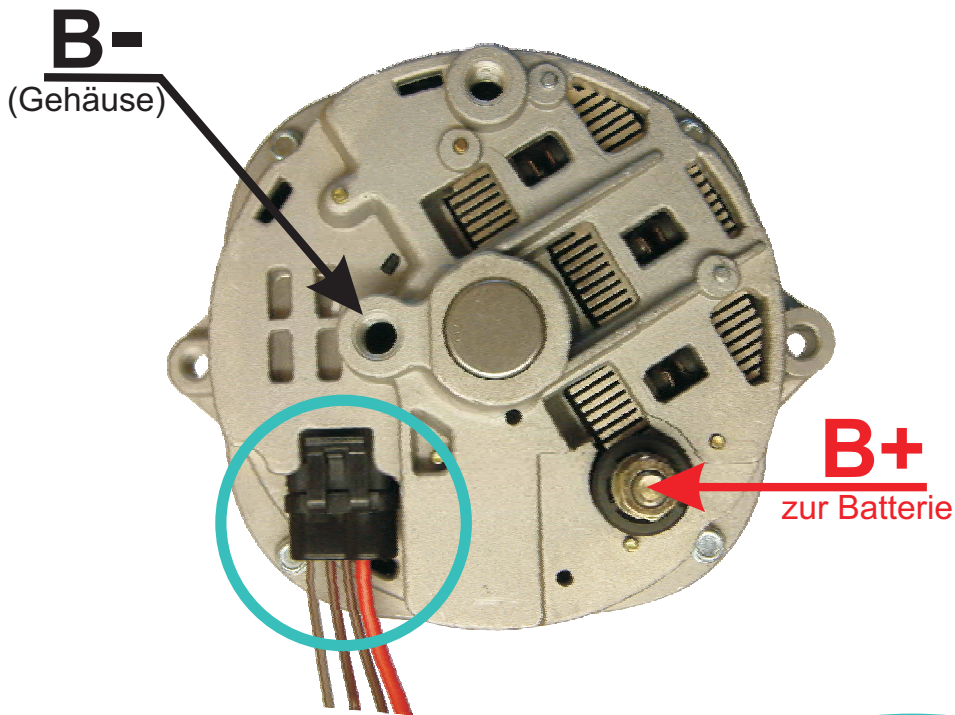

## ***STERLING POWER PRODUCTS LTD***

86A Blackpole Trading Estate West  
Worcester, WR3 8TJ  
England

Tel.: +44 (0)1905 452105

Fax: +44 (0)1905 458836

Email: [help@german.sterling-power.com](mailto:help@german.sterling-power.com)