
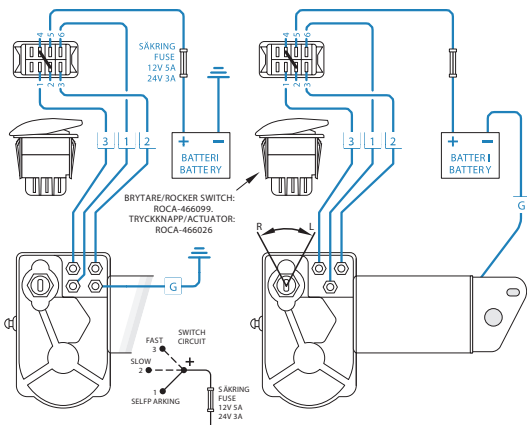


Inställning av slagvinkel 40°, 50°, 60°, 70°, 80°, 90°, 100°, 110° och höger eller vänster självparkeringsläge.

(Motorn är inställd på 110° och högerparkering vid leverans).

1. Tag bort skyddsplåten (4-skruv).
2. Tag bort stoppbrickan och lyft ut transmissionsarmen.
3. Skruva ur skruvarna som fäster hålskivan i snäckhjulet.
4. Lyft av hålskivan från snäckhjulet. Nu ser du de 2 avlånga spåren "R" och "L" i det vita snäckhjulet.
5. Placera hålskivan så att hålet som motsvarar din valda vinkel, sammanfaller med spår "R" eller "L".  
"R" = höger självparkeringsläge.  
"L" = vänster självparkeringsläge.
6. Återmontera hålskivan, transmissionsarmen och kåpan.

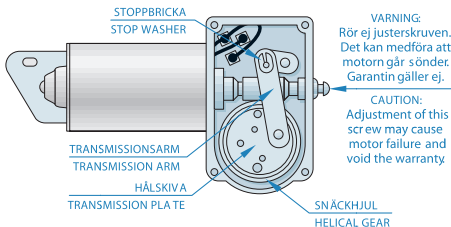

To change sweep angle to 40°, 50°, 60°, 70°, 80°, 90°, 100°, 110° and adjust left or right self parking.

(The motor is set in 110° and right self parking).

1. Remove cover plate (4 screws).
2. Remove the stop washer and lift off the transmission arm.
3. Unscrew the 2 screws fastening the transmission plate.
4. Lift off the transmission plate from the white helical gear. You can see now the 2 grooves "R" and "L" on the helical gear.
5. Place the transmission plate with the hole for the desired angle to the groove "R" or "L".  
"R" = right self parking. "L" = left self parking.
6. Remount the transmission plate, transmission arm and cover plate.

Monteringshål C-C = 158,7mm  
Mounting holes C-C = 158.7mm

Standard inställning 110° / högerparkering  
Standard adjustment 110° / right self parking

Ø 16,5